



PLACEMENT OF LOCATOR® DENTURE RETAINING ABUTMENT

LOCATOR® Abutments are used to secure removable denture prosthetics.

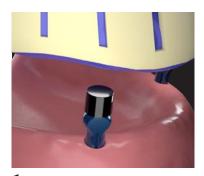

Take an implant level impression using standard impression posts. Send impression to the laboratory for them to pick the correct abutments and make a customized tray.

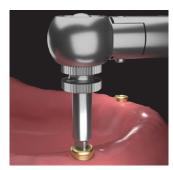

2 APPT 2: When case is returned from the laboratory, remove healing caps, insert abutments, and drive them into the implants using the DLR-0345-00 LOCATOR® Driver and a torque wrench.

Torque specifications: 300 Series: 20 Ncm 400 & 500 Series: 30Ncm



3 Using the custom tray, take a second impression with the appropriate impression copings over the abutment. Send impression to the laboratory for master cast, base plate and wax rims for jaw relations.

4 APPT 3: When case is returned from the laboratory use the base plate and wax rims to register jaw relations. Send to laboratory.



5 APPT 4: When case is returned from the laboratory, try in denture setup. Make adjustments as necessary before processing final restoration.

6 APPT 5: When final denture is returned, insert appliance, adjust occlusion, retention caps and denture base as necessary.