


SURGICAL PROCEDURE



1 Make a full-thickness flap of the soft tissues to access the bone ridge.

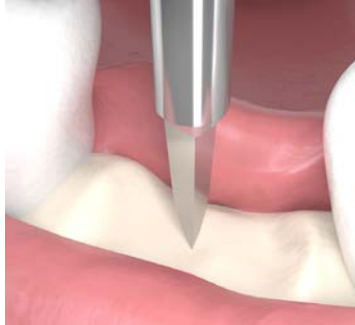

2 Use the lance drill to mark the cortical bone for the subsequent drills.



3 Use a pilot drill to establish orientation and initial depth for the parallel pin.



4 Use a parallel pin to evaluate parallelism with natural teeth or other adjacent implant sites.



5 Take an x-ray with the parallel pin inserted into the osteotomy to verify parallelism.



6 Widen the diameter of the implant site using sequential drills of increasing diameter. The drill depth should correspond to the length of the selected implant.