


## SURGICAL PROCEDURE



**1** Make a full-thickness flap of the soft tissues to access the bone ridge.

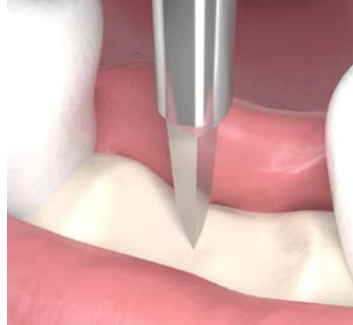

**2** Use the lance drill to mark the cortical bone for the subsequent drills.



**3** Use a pilot drill to establish orientation and initial depth for the parallel pin.



**4** Use a parallel pin to evaluate parallelism with natural teeth or other adjacent implant sites.



**5** Take an x-ray with the parallel pin inserted into the osteotomy to verify parallelism.



**6** Widen the diameter of the implant site using sequential drills of increasing diameter. The drill depth should correspond to the length of the selected implant.